



www.vac-rac.com

info@vac-rac.com

QUAD RAC - INSTRUCTIONS



For use on all vehicles.

Please read and follow carefully.

- Assemble your racks as shown in the photos.
- Ensure bases and vehicle is clean, and then place a rack on flat area of hood/bonnet on **passenger side**.
- If necessary gently bend the metal plate so that each base sits evenly in line with the surface. (see enclosed drawing)
- Press down on a base and operate the levers.
- Check the other base is in line with the surface and repeat.
- Fit the other rack on a flat area of roof or windshield.
- Attach rods with reels forward and loop elastics over bar ends.
- Elastic tension can be adjusted using the teeth under the bar.
- Check security by pulling gently on the bases, not the "T"s.
- Levers must be in the **UP/OFF** position in storage.

IMPORTANT NOTES

- Vac Racs are designed for fishing rods only and should be removed after use.
- Not for use on ice covered vehicles.
- Wet vehicles – wipe off excess water.
- Cars parked under trees, long term, can build up aphid deposits.
- To avoid rod whipping do not drive at high speed.
- If a base is sitting correctly there is short lever movement before it "bites" and then strong resistance.
- If the lever moves half way or more, before resistance is felt, the base is not sitting properly. See above.
- If you accidentally deform the bases, put them on a smooth clean surface with the levers in **UP/OFF** position. (They will gradually return to their shape at room temperature).

The metal plate should be adjusted to vehicle curvature as follows:

1




Gently bend the plate so that both bases sit flat on the surface without pressing

2



**Once the plate is set
2 remove the films
3 press on the bases
operate the levers**

3

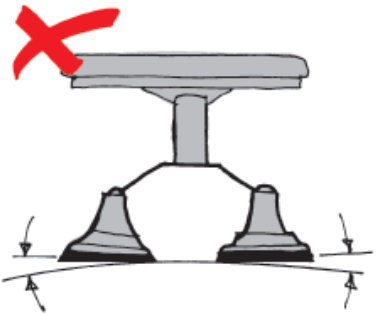

Please read box instructions